折线不印刷

739 mm

210 mm


Quick Access Car Safe

EA-70 operating instructions




Attention: Please make sure to carry the Mechanical Key with you or keep it in a safe place

Close display

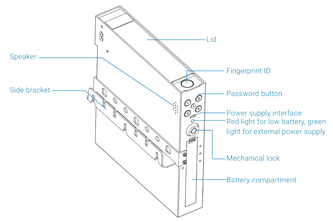

Open display

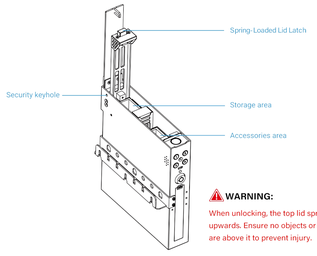

⚠ WARNING:
When unlocking, the top lid springs open upwards. Ensure no objects or body parts are above it to prevent injury.

Specifications

Model Number	EA-70
Fingerprint Sensor	Semiconductor
Quick Access	0.5S
Unlocking Method	Codes/Fingerprints/Keys
Fingerprint Storage	Up to 50
Password Storage	Up to 50
Battery Model	AA
Product Weight	6.6 lb
Supported Weight	2.1 lb
USB Powered	5V/2A
Overall Dimensions	L222*W45*H237 (mm)
Internal Storage Dimensions	L140*W33*H208 (mm)
Password Digits	6 digits
Operating Temp	14~120°F

Packing List

Safe*1	Battery AA*4	Data cable*1
Mechanical Key*2	Screw*3	Bracket screws*4
Side Hanger*1	Steel wire safety rope*1	
Car mounting base Foam*1	Car Mounting Bracket*1	

Important Precautions

1. Read this manual carefully and follow all instructions before operation.
2. Press and hold the ***1*** key to turn the voice prompt **ON** or **OFF**.
3. For fingerprint unlocking, ensure the fingerprint reader and your finger are clean and dry.
4. If the battery power is too low, the door cannot be unlocked. In this case, use an external ***5V/2A*** power supply connected to the ***Emergency Power Port*** via the provided ***Type-C USB cable*** to unlock the door.
5. The ***Type-C port is for power supply only*** and cannot charge the internal battery. **(Alternatively, you may use a USB-C cable to keep the safe permanently connected to power, eliminating the need for batteries.)**
6. Do not use corrosive or abrasive substances to clean the safe, as this may damage components and affect both performance and appearance.
7. If the fingerprint or PIN code fails to unlock the safe, use the ***mechanical backup keys***. Store these keys in a secure location. If the keys are lost, note the key serial number and contact the manufacturer for replacements. ***All associated costs will be borne by the user.***
8. After ***8 consecutive incorrect attempts*** (fingerprint or PIN), the safe will enter a temporary lockout period for several minutes and remain inoperable until it automatically resets.
9. If you forget your PIN or your fingerprint is not recognized, use the mechanical key to open the safe and reset your PIN and fingerprints.
10. If illegal operation causes a system error, wait approximately ***15 seconds*** for the system to reboot and resume normal operation.

DANGER
Keep out of reach of children. Do not allow children to touch oroperate the product to prevent injury.

WARNING
When unlocking, ensure no objects or body parts are above the top lid, as it springs open upwards and may cause impact injury.

WARNING:High Spring Tension
When a firearm is not stored inside, the spring mechanism retains significant force. Exercise caution during operation to avoid pinching or impact injuries.

Contact Us

For any questions regarding operation, installation, or other issues, please contact our customer service via email. We are here to assist you.
Email: lairtpow@qq.com

About battery installation



Step 1: Remove the outer cover of the battery compartment.



Step2: Remove the battery retainer inside



Step 3 :Secure the 4 AA batteries.Put the battery holder back into the battery compartment and close the outer cover of the battery compartment.You can finish the battery installation.

How to Close the Safe

Important Note:

- When a firearm is stored inside: Press the firearm downward until the latch engages, then close the lid.
- When the safe is empty: Manually press the latch downward until it clicks into place, then close the lid.



Step 1: Press the internal latch assembly.
Locate and firmly press the internal latch area (as shown in the diagram).
Caution: Do not touch the spring switch during this operation.



Step 2: Secure the latch in the down position.
Press the latch assembly all the way down until it locks into place at the bottom.
You may now release your finger.



Step 3: Close the safe lid.
Place the external lid onto the safe.
Important: While closing, apply continuous downward pressure on the lid until the locking pin fully engages with the lock mechanism. Failure to do so may accidentally trigger the pressure switch, causing the latch to release and pop up again.



Step 4: Confirm lock engagement and release.
Once the locking pin at the end of the lid is fully secured by the lock, you may safely release your finger.

About Password and Fingerprint



- Password:
  Short press the Password key to add a new password.
  Long press the Password key for 3 seconds to delete the current password.
  Long press the Password key for 8 seconds to delete all passwords.
- Fingerprint:
  Short press the Fingerprint key to add a new fingerprint.
  Long press the Fingerprint key for 3 seconds to delete the current fingerprint.
  Long press the Fingerprint key for 8 seconds to delete all fingerprints.

Add Password Setting



- Step 1: Short press the right button in the picture and wait for the voice prompt.
- Step 2: Enter the 6-digit password you want to set after the voice prompt.
- Step 3: Repeat the 6-digit password according to the voice prompt.
- Step 4: The voice prompt indicates that the password is set successfully.



Attention: Please make sure to carry the Mechanical Key with you or keep it in a safe place

Add Fingerprint Setting





- Step 1: Short press the left button in the picture above and wait for the voice prompt.
- Step 2: Input your fingerprint 5 times in a row (Every time you input fingerprint, there will be a voice prompt)
- Step 3: The voice prompts the fingerprint setup successfully.

Warm Tips: About the operation of adding fingerprints, we will also show it in the video on the sales page.

About safe wire rope lock installation



Step1: Pass the wire rope through the hole at the end and secure it where you want it.



Step2: Pass the wire rope through the safe lockhole and secure it by tightening the nut.



Step3: After tightening the nut, the installation ofthe wire rope lock is completed.(The safehas a compact design, so please be patient when installing the nut.)

About the installation method of side hanging



Step1: place the bracket on the side of the nightstand and hold it down. then installthe 3 screws through the three fixing holes.Then remove the bracket.



Step2: Fix the bracket on the safe by 4 screws.



Step3: Align the three fixing holes of the safe bracket with the screws and press down hard to make the screws fit theholes perfectly.



Step4:The safe installation is completed

About the installation method for large cars (SUV/large sedan/pickup truck)



Step1: Fix the side bracket to the safe by 4 screws.



Step2: Insert the safe between the gap between the car seat and the center console, and make the side bracket fit perfectly with the seat surface.



Step3: Installation is completed.Warm tip: About the operation of car installation we will show the video on the sales page.

About the installation method for compact cars (small cars)



Step1: Fix the lower bracket to thebottom of the safe by 2 screws.



Step2: Fix the side bracket to thesafe by 4 screws.



Step 3: Stuff the foam between the car seat and the center console.



Step 4: Insert the bracket at the bottom of the safe into the gap in the middle of the foam and adjust its position to fix the safe.



Step 5: Installation completed.

Installation Support:
For visual guidance, please view the demonstration video on our sales page. Alternatively, contact us via email to obtain the installation video directly.

Important Precautions

There are 2 mechanical keys with corresponding numbers, please keep them in a safeplace; if lost and a new key is needed, please contact the manufacturer to match the new key and charge the relevant fee.

Security Kocking Hole

The security locking hole is located on the side of the safe and can be used in conjunction with the security wire safety rope to prevent arbitrary movement or access.

Warranty

1. This product is warranted free of charge for 1 year of normal use from the date of purchase.
2. During the warranty period, the following are not covered.
   (1) Accident/Idea! External force/inappropriate voltage, resulting in damage.
   (2) Damage caused by natural disasters and other force majeure(such asearthquake, fire, flood, typhoon).
   (3) Damage caused by improper use.
   (4) Appearance of natural dirt due to use.
3. We will charge an appropriate fee for any damage beyond the warranty.

Share Your Experience

We hope your new safe meets all your expectations. As we strive for excellence, we would be grateful to hear about your experience. Your insights are invaluable in helping us shape future products for customers like you.